

Li-LV LFP Battery Module

USER MANUAL



Content

Overview	3
Product specifications	3
Errors or omissions	3
Electronic device:Do not throw away	3
Important Safety Instructions	4
General information	4
Environmental conditions	5
Specifications	6
Standard Packing List	7
Installation instructions	8
Mechanical Installation	8
Electric Connection	9
Start the Battery Array	10
System Setting	11

To secure the full 10-year product warranty, be sure to install the Wattsonic Li-LV battery modules by qualified installers.

Warning: Read this entire document before installing or using Wattsonic Li-LV LiFePO4 battery modules. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or can damage Wattsonic Li-LV LiFePO4 battery module, potentially rendering it inoperable.



PRODUCT SPECIFICATIONS

All specifications and descriptions contained in this document are verified to be accurate at the time of printing. However, because continuous improvement is a goal at Wattsonic, we reserve the right to make product modifications at any time.

The images provided in this document are for demonstration purposes only. Depending on product version and market region, details may appear slightly different.

ERRORS OR OMISSIONS

To communicate any inaccuracies or omissions in this manual, please send an email to : info@wattsonic.com



ELECTRONIC DEVICE: DO NOT THROW AWAY

Proper disposal of batteries is required. Refer to your local codes for disposal requirements(ie. EC N 1013/2006 among European Union).



©2020 Wuxi Wattsonic Energy Technology Co., Ltd. All rights reserved.

All information in this document is subject to copyright and other intellectual property rights of Wuxi Wattsonic Energy Technology Co., Ltd. and its licensors. This material may not be modified, reproduced or copied, in whole or in part, without the prior written permission of Wuxi Wattsonic Energy Technology Co., Ltd. and its licensors. Additional information is available upon request. The following are trademarks or registered trademarks of Wuxi Wattsonic Energy Technology Co., Ltd. in UK and other countries.



All other trademarks contained in this document are the property of their respective owners and their use herein does not imply sponsorship or endorsement of their products or services. The unauthorized use of any trademark displayed in this document or on the product is strictly prohibited.

Important Safety Instructions

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS. Wattsonic Li-LV LiFePO4 battery module installation and repair instructions assume knowledge of high voltage electricity and should only be performed by Wattsonic Certified Installers. Wattsonic assumes no liability for injury or property damage due to repairs attempted by unqualified individuals or a failure to properly follow these instructions. These warnings and cautions must be followed when using Wattsonic.

SYMBOLS IN THIS DOCUMENT

This manual uses the following symbols to highlight important information:

Warning	WARNING indicates a hazardous situation which, if notavoided, could result in injury or death.
Caution	CAUTION indicates a hazardous situation which, if notavoided, could result in damage to the equipment.
Note	NOTE indicates an important step or tip that leads to best results, but is not safety or damage related.

GENERAL INFORMATION



Warning: Read this entire document before installing or using Wattsonic Li-LV battery. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or can damage Wattsonic Battery, potentially rendering it inoperable.



Warning: A battery can present a risk of electrical shock, fire, or explosion from vented gases. Observe proper precautions.



Warning: Wattsonic Li-LV Battery installation must be carried out only by Wattsonic Certified Installers, who have been trained in dealing with high voltage electricity.



Warning: Wattsonic Li-LV battery is heavy and challenging to lift.



Warning: Use Wattsonic Li-LV Battery only as directed.



Warning: Do not use Wattsonic Li-LV Battery if it is defective, appears cracked, broken, or otherwise damaged, or fails to operate.



Warning: Before beginning the wiring portion of the installation, first power off the inverter and then open the AC and DC disconnect switches (if applicable for the installation).



Warning: Do not attempt to open, disassemble, repair, tamper with, or modify Wattsonic Li-LV Battery. Wattsonic Li-LV Battery is not user serviceable. LiFePO4 battery Cells in Wattsonic Li-LV Battery are not replaceable. Contact the Wattsonic Authorized Reseller who sold the Wattsonic Li-LV Battery for any repairs.



Warning: Do not connect Wattsonic Li-LV Battery to alternating current(AC) carrying conductors. Wattsonic Li-LV Battery must be wired to either an inverter or a DC combiner panel that is then wired to an inverter. No other wiring configuration may be used.



Warning: Wattsonic Li-LV Battery contains components, such as switches and relays, that can produce arcs or sparks.



Warning: To protect Wattsonic Li-LV Battery and its components from damage when transporting, handle with care. Do not impact, pull, drag, or step on Wattsonic Li-LV Battery. Do not subject Wattsonic Li-LV Battery to any strong force. To help prevent damage, leave Wattsonic Li-LV Battery in its shipping packaging until it is ready to be installed.



Warning: Do not insert foreign objects into any part of Wattsonic Li-LV Battery.



Warning: Do not expose Wattsonic Li-LV Battery or its components to direct flame.



Warning: Do not install Wattsonic Li-LV Battery near heating equipment.



Warning: Do not immerse Wattsonic Li-LV Battery or its components in water or other fluids.



Caution: Do not use cleaning solvents to clean Wattsonic Li-LV Battery, or expose Wattsonic Li-LV Battery to flammable or harsh chemicals or vapors.



Caution: Do not use fluids, parts, or accessories other than those specified in this manual, including use of non-genuine Wattsonic Li-LV parts or accessories, or parts or accessories not purchased directly from Wattsonic or a Wattsonic-certified party.



Caution: Do not place Wattsonic Li-LV Battery in a storage condition for more than one (1) month, or permit the electrical feed on the Wattsonic Li-LV Battery to be severed for more than one (1) month, without placing Wattsonic Li-LV Battery into a storage condition in accordance with Wattsonic's storage specifications.



Caution: Do not paint any part of Soltaro LFP Battery, including any internal or external components such as the exterior shell or casing.



Caution: Do not connect Wattsonic Li-LV Battery directly to photovoltaic (PV) solar wiring.



Caution: When installing Wattsonic Li-LV Battery in a garage or near vehicles, keep it out of the driving path. If possible, install the Wattsonic Li-LV Battery on a side wall and/or above the height of vehicle bumpers.

ENVIRONMENTAL CONDITIONS



Warning: Install Wattsonic Li-LV Battery at a height that prevents damage from flooding.



Warning: Operating or storing Wattsonic Li-LV Battery in temperatures outside its specified range might cause damage to Wattsonic Li-LV Battery.



Warning: Do not expose the Wattsonic Li-LV Battery to ambient temperatures above 60°C (140°F) or below -30°C (-22°F).




Caution: Ensure that no water sources are above or near Wattsonic Li-LV Battery, including downspouts, sprinklers, or faucets.

Specifications



2.5KWH FREE STAND LIFEPO4 BATTERY MODULE

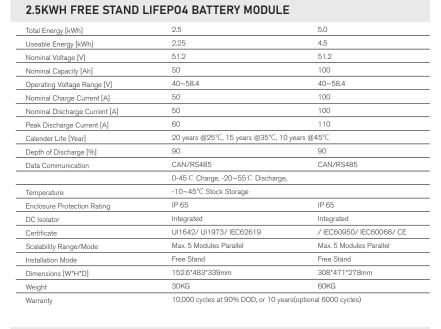



2.5KWH/5KWH WALL MOUNTED LIFEPO4 BATTERY MODULE

2.5KWH/5KWH WALL I	MOUNTED LIFEPO4 BATTER	RY MODULE	
Total Energy [kWh]	2.5	5.0	
Jseable Energy [kWh]	2.25	4.5	
Nominal Voltage [V]	51.2	51.2	
Nominal Capacity [Ah]	50	100	
Operating Voltage Range [V]	40~58.4	40~58.4	
Nominal Charge Current [A]	50	100	
Nominal Discharge Current [A]	50	100	
Peak Discharge Current [A]	60	110	
Calender Life [Year]	20 years @25°C, 15 years @35°C, 10	20 years @25°C, 15 years @35°C, 10 years @45°C	
Depth of Discharge [%]	90	90	
Data Communication	CAN/RS485	CAN/RS485	
	0-45°C Charge, -20~55 Discharge,		
Temperature	-10~45°C Stock Storage		
Enclosure Protection Rating	IP 65	IP 65	
DC Isolator	Integrated	Integrated	
Certificate	UI1642/ UI1973/ IEC62619	/ IEC60950/ IEC60068/ CE	
Scalability Range/Mode	Max. 5 Modules Parallel	Max. 5 Modules Parallel	
Installation Mode	Wall Mounted	Wall Mounted	
Dimensions [W*H*D]	414*470*185mm	414*750*185mm	
Weight	30KG	60KG	
Varranty	10,000 cycles at 90% DOD, or 10 yea	10,000 cycles at 90% DOD, or 10 years(optional 6000 cycles)	

^{*} Compatible inverter brands: Wattsonic/ SMA Sunnylsland/ Victron/ Imeon/ Voltronic/ SolaX/ GoodWe/ SofarSolar/ Solis/ Studer

^{*} Wattsonic reserves the right to modify the technical datasheet and apperance of the product in the user manual without prior advice to the users

Standard Packing List



Li-LV LFP Battery



Battery Backsheet



Battery<-->Inverter



Battery<-->Inverter Rj45 Communication Cable



M6 Expansion Screws



COM Resistor

Mechanical Installation

Single battery installation



Step-1, Confirm the exact mounting position of battery backsheet.



Please use M6 expansion screws to fix the battery backsheet on the wall according to the fixed position.



Step-2, Hanging on the battery module to the mounted battery backsheet.



Multiple battery installation



Step-1, Confirm the



Please use M6 expansion exact mounting position of battery backsheet.

screws to fix the battery backsheet on the wall according to the fixed position.



Step-2, Hanging on the battery module to the mounted battery backsheet.



Electric Connection

Top connection interface

- Battery<-->Inverter Power Cables(+)
- ② Battery<-->Inverter Power Cables(-)
- ③ Communication cables(up)
- 4 Communication cables(down)
- **⑤** Battery Reset Button
- 6 DC Isolator
- 7 Grounding Point



® Communication cable

9 COM Resistor



2.Put on a protective cap



Step-3, Cables Connection and COM Resistor

Connect battery power cables and communication cables as the pictures shown below.

Then please plug in the COM resistor to the last communication interface, which is open.

Please noted that no matter one single battery installation or multi batteries parallel connection, COM resistor is mandatory required to strength the CAN Bus signal.



[®] Wattsonic standard parallel kits Maximum withstand current is 100A.If you have a larger load demand, you can choose to configure the DC Combiner box.




DC Combiner box




Start the Battery Array

Step-4, please pull on the DC Isolator

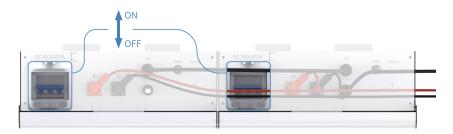

The indicator light is on, showing green, and the machine is on normally.

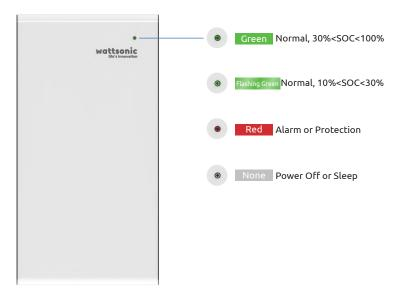

System Setting

NORMAL OPERATION

During normal operation, if Li-LV LFP Battery Module are installed correctly, the inverter and battery will start communication immediately, then begin to process power commands. See the inverter manual for further configuration instructions.



Warning: Do not operate Li-LV LFP Battery Module unless all covers are in place.



Warning: Do not disconnect anything from or add anything to Li-LV LFP Battery Module.



Caution: Do not try to communicate with Li-LV LFP Battery Module using third party tools or diagnostics Li-LV LFP Battery Module and the inverter.



Caution: Do not lean on, stack anything on top of, or hang anything from Li-LV LFP Battery Module or the conduit.

LI-LV LFP BATTERY MODULE CARE

Keep the top edge of Li-LV LFP Battery Module clear of articles to maintain optimal airflow.

To clean Li-LV LFP Battery Module, use a soft, lint-free cloth. The cloth can be dampened with only water if needed. It should not be dripping.



Caution: Do not use cleaning solvents to clean Li-LV LFP Battery Module.

WATTSONIC HEADQUARTERS

Wuxi Wattsonic Energy Technology Co., Ltd NO.200 Linghu Road, Xinwu District, Wuxi 214100, China TEL. +86 510 8102 0876 SITE.www.wattsonic.com EMAIL. info@wattsonic.com

*Wattsonic reserves the right to modify the technical datasheet and apperance of the product in the user manual without prior advice to the users.